



PERFORMANCE MACHINE LIMITED WARRANTY INFORMATION

Performance Machine warrants to the original purchaser that the parts to be free of manufacturing defects in materials and workmanship for a period of (1) year from the date of purchase. In the event warranty service is required, you must call Performance Machine immediately with a description of the problem.

If it is deemed necessary for Performance Machine to make an evaluation to determine whether the part is defective, a return authorization number will be given by Performance Machine. The parts must be packaged properly to not cause further damage and returned prepaid to Performance Machine with a copy of the original invoice of purchase and a detailed letter outlining the nature of the problem. If after the evaluation by Performance Machine the part was found defective it will be repaired or replaced at no cost to you. If we replace it, we may replace it with a reconditioned one of the same design.

Performance Machine shall not be held liable for any consequential damage resulting from the failure of a Performance Machine part. Performance Machine shall have no obligation if a part becomes defective as a result of improper installation or abuse such as chipping of anodize from rocks and trail debris.

IMPORTANT NOTICE

Before installing, read through these instructions completely; this will familiarize you with the way in which parts fit together and the tools needed to complete the job. This product involves alterations to your vehicle and may void your factory warranty. PM STRONGLY recommends this installation be done by an experienced mechanic.

DISCLAIMER

These Performance Machine parts are designed for high performance off road applications and are intended for the very experienced driver only. The installation of these Performance Machine parts may adversely affect or void your factory warranty.

NOTE: Tires should be mounted by an experienced person, in accordance with good tire mounting practices.

1. Refer to your service manual to properly lift and support vehicle. Remove existing wheel.
2. Verify wheel clearance and correct mounting lug pattern prior to mounting tire.
Note: Performance Machine will not be responsible if tires interfere with vehicle. It is your responsibility to use a smaller tire or adjust vehicle to allow for proper clearance. Do not exceed maximum tire diameter specified on the wheel.
3. Tires must be mounted / replaced by an experienced person, in accordance with good tire mounting practices and equipment designed for the tire industry. Do not exceed the maximum tire pressure, or 35 psi (whichever is lower).
4. Apply anti-seize lubricant to the lug nuts on conical area only (see figure). Only use 60° conical lug nuts.
5. Carefully position wheel onto the wheel hub and finger tighten lug nuts.
6. Lower the vehicle, then torque lug nuts to 89 ft-lbs.
Note: Re-torque lug nuts before each use

Hub Cap Install tips:

- When installing the plastic hub cap, apply even pressure and allow retaining tabs to engage equally into the center bore.
- When installing the aluminum hub cap, it is recommended to apply multi-purpose grease to the o-ring before every install.

ANTI SEIZE APPLICATION LOCATION

